

\* 95122 (black, 700mA) \* 95121 (black, 350mA) \* 95248 (white, 700mA) \* 95125 (black, 12 - 24V)



## LUMITRONIX LED Tastdimmer

### MONTAGEANWEISUNG (FIG. 1)

Schrauben Sie die Verschlusschrauben **A** heraus  
Nehmen Sie die Abdeckung **B** und den Taster **C** heraus  
Lösen Sie die Schrauben **D** der Kabelverankerung **E**  
Isolieren Sie das anzuschließende Kabel unter Beachtung der angegebenen Werte  
Schließen Sie das Versorgungskabel an die Klemmen Input + und Input - auf der Platine **F** an  
Verbinden Sie die Leitung an den Klemmen auf der Platine **F**  
Montieren Sie die Kabelverankerung **E** mit den Schrauben **D**  
(Achtung: Kabelverankerung **E** wie gezeigt positionieren, je nach Art des anzuschließenden Kabels, flach oder rund).  
Abdeckung **B** und Taster **C** montieren, dabei die Schrauben **A** anziehen

### GEBRAUCHSANWEISUNG

AN und AUS: Kurzdruck (weniger als 1 Sek.).  
MIN- und MAX-Einstellungen: Dauerdruck.  
Speicherung der zuletzt vorgenommenen Einstellung.  
Bei jedem Tastendruck, wird die Dimmrichtung umgekehrt.

SCHLIESSEN SIE NIEMALS ANDERE ODER HÖHERE LASTEN AN ALS DIE ANGEgebenEN NENNWERTE.



## LUMITRONIX LED Push Button Dimmer


### ASSEMBLING INSTRUCTION (FIG. 1)

Unscrew the closing screws **A**  
Take out the cover **B** and the button **C**  
Unscrew the screws **D** of the cord anchorage **E**  
Strip the cable to be connected respecting the quotes indicated  
Connect supply cable to the terminals Input + and Input - on the board **F**  
Connect lamp cable to the terminals on the board **F** Mount cord anchorage **E** using the screws **D** (Beware: position cord anchorage **E** as showed, according to the type of cable, flat or round, to be connected).  
Mount cover **B** and button **C**, screwing the screws **A**

### USE INSTRUCTION

ON and OFF: quick pressure (less than 1 sec.).  
MIN. and MAX. settings: Continuous pressure.  
Memorization of the latest setting made.  
At every pressure, the direction of the setting is inverted.

NEVER CONNECT DIFFERENT OR HIGHER LOADS THAN THE NOMINAL ONES DECLARED

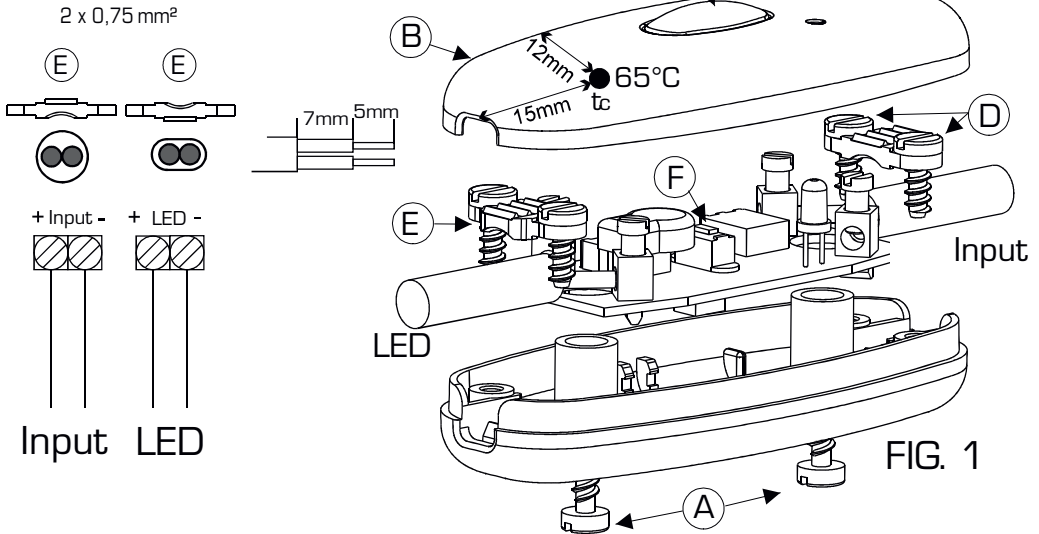

The presence of this symbol on product or its packaging means that the product should not be disposed of with your other household waste.  
Produkt nicht über den Hausmüll entsorgen.